


MikroTik

- [Konfiguration NTP-Client](#)
- [Konfiguration Wireguard VPN](#)
- [Router Konfiguration Backup erstellen](#)

Konfiguration NTP-Client

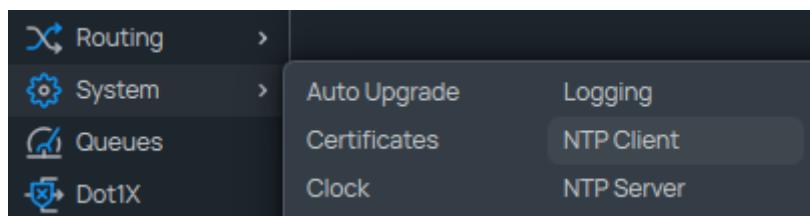

The screenshot shows the "NTP Client" configuration dialog box with the following settings:

Enabled	<input checked="" type="checkbox"/>
Mode	unicast
NTP Servers	ch.pool.ntp.org
VRF	main
Status	synchronized
Freq. Drift	8.683 PPM
Synced Server	ch.pool.ntp.org
Synced Stratum	2
System Offset	15 ms

On the right side, there are sections for **Actions** (Reset Drift, Peers) and **Configuration** (Servers). At the bottom are **Cancel**, **Apply**, and **OK** buttons.

Konfiguration Wireguard VPN

Router Konfiguration Backup erstellen

<https://monovm.com/blog/how-to-backup-mikrotik-configuration/#:~:text=Step%201%3A%20Log%20in%20to,top%20of%20the%20files%20window.>